

kogan

KAGHTRCSPYA

USER MANUAL



Welcome to **Spy Ghost!**

Congratulations on your purchase!

Spy Ghost is a taut, sleek and fast car controlled by iPod touch, iPhone, iPad, Android smartphone or tablet. It's specially pre-installed with a camera. You will feel excited to be a spy, with its quality photo and video synchronize function.

Warning with regard to the product

- Do not use this product in an environment that is with extreme heat or cold, dust or damp.
- Avoid placing the product in an area that is not properly ventilated; do not cover and place the product on carpeting or similar surfaces.
- Do remember to put away the USB cable when product is fully charged. Otherwise, the product might fall on to the floor when the USB cable is moved.
- Do not expose the product to direct sunlight, fire, or other sources of heat that have an extreme effect on the temperature.

Caution

- When charging this product by using the charging cable from USB, always hold the charging plug to plug in and out. If you pull the cable instead of the charging plug, the charging cable might get damaged and there is a risk of short-circuiting or electric shocks.



Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Use the Spy Ghost further away from the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult Kogan or an experienced radio/TV technician for help.



1. Specification

Driving time: 10-15 minutes

Charging time: 70-80 minutes

Control distance: 30-50 m


Battery type: Li-Po 3.7V 750 mAH

Size: 16.4 cm x 11.1 cm x 7.8 cm

Weight: 374 g

Note: The different environmental conditions and use may lead to above specifications being different.

2. Getting to know Spy Ghost

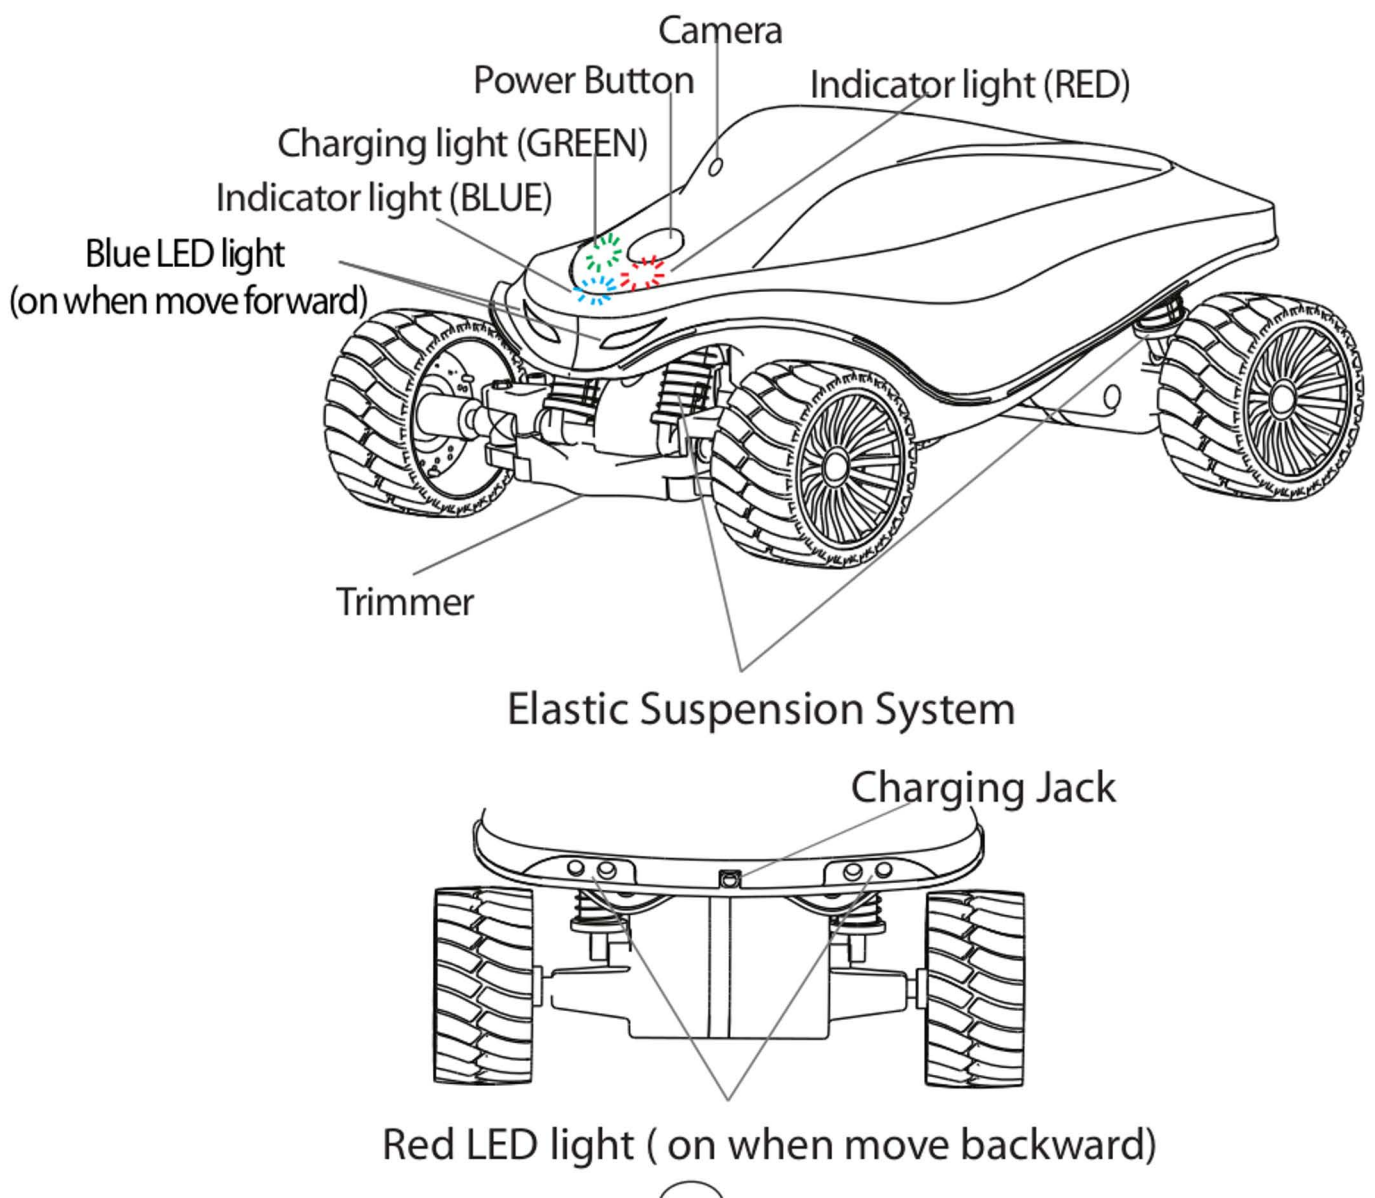

3. Unpacking and storing

Spy Ghost is packed properly in place to avoid any damage during transit. It is a delicate device so you must be careful when removing it from the package. Ensure the contents are complete with:

- 1) 1 × Spy Ghost
- 2) 1 × USB Charging Cable

Packaging box should be kept for storage of Spy Ghost after each use.

4. Charging





Spy Ghost contains a re-chargeable Li-Ion battery. Charging should only be done by using the USB charging cable enclosed.

1. Turn Spy Ghost off by pressing the power button. Be sure the indicator light is off. (pic.1)
2. Insert the charging plug of the USB charging cable into the charging jack of Spy Ghost. Connect the USB interface pic.2
 - a) with any USB interface power.
 - b) with a smartphone adapter (not provided). Then insert this adapter socket in to an AC power socket. (pic.3)
3. The charging indicator on Spy Ghost will turn on in GREEN. (pic4)
4. Once the GREEN charging indicator turns off, it means that the car is fully recharged.



Note: The AC method of charging is considerably quicker than using USB interface.

Be sure that the battery in Spy Ghost has been cooled down for 5 minutes after driving before recharging.

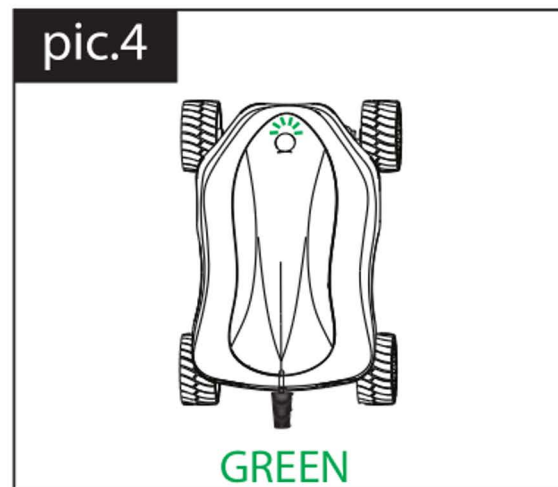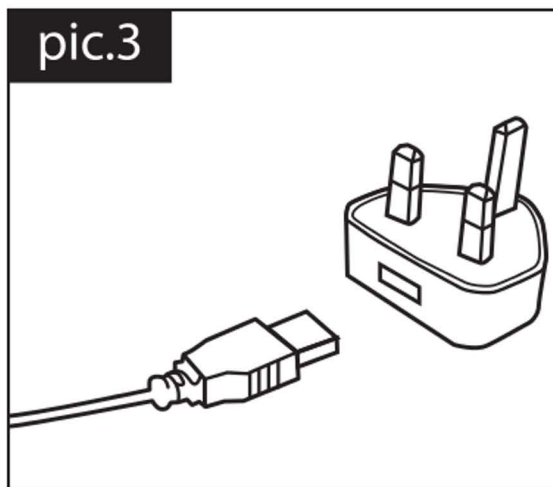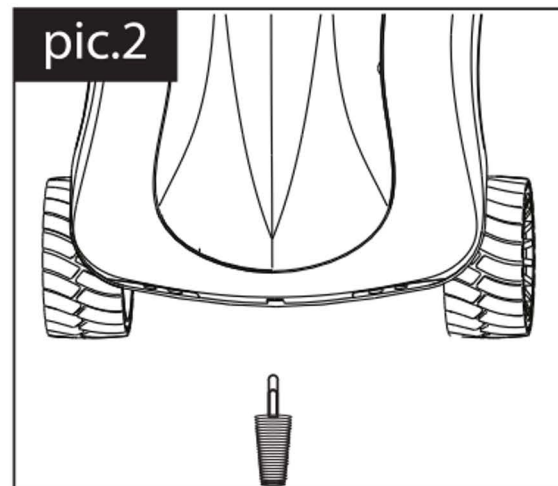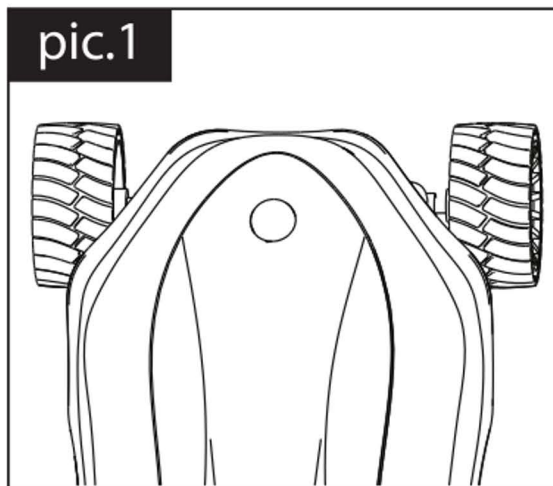

5. Battery care information

The Spy Ghost is powered by rechargeable Li-Ion battery.

Li-Ion batteries are not replaceable.

- 1) Rechargeable batteries are only to be charged under adult supervision.
- 2) Rechargeable batteries are only to be charged by adults or by children at least 8 years old.
- 3) Regularly examine the USB charging cable or smart phone plug adapter (not provided) for any damage to their cord plug, enclosure and other parts. In case of damage do not use until it has been repaired or replaced.
- 4) The car should not be connected to any other power supply than the ones recommended.

6. Driving instruction

1) Download software

~~For iPod, iPhone and iPad~~

iPod touch (4th generation)
iPhone 5, iPhone 4/4S and iPhone 3GS
iPad (3rd generation), iPad 2 and iPad

Go to App store



1



2



3

Search, download and install 'iConSpy'



For Android smartphone and tablet

Android Smartphone or tablet

Go to Google Play




2) Connecting iPod touch, iPhone, iPad, Android smartphone or tablet with the car

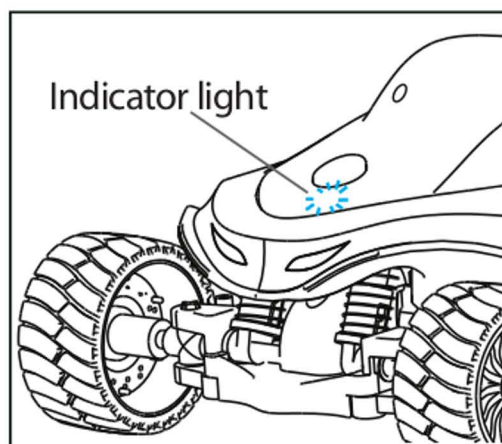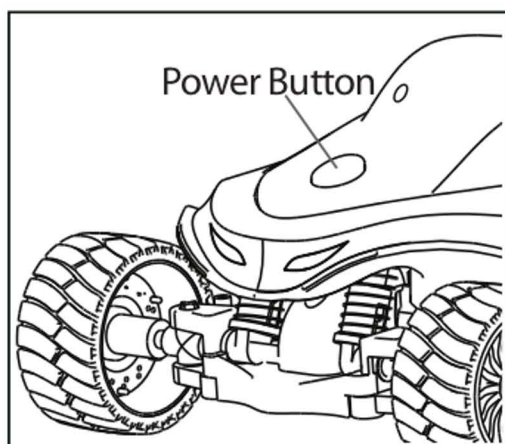


Turn on the car. The blue light inside the car begins to flicker once each time.


Note: When the car is turned on, its red power light inside will be flickering three times per second, please turn the car off and recharge the battery.

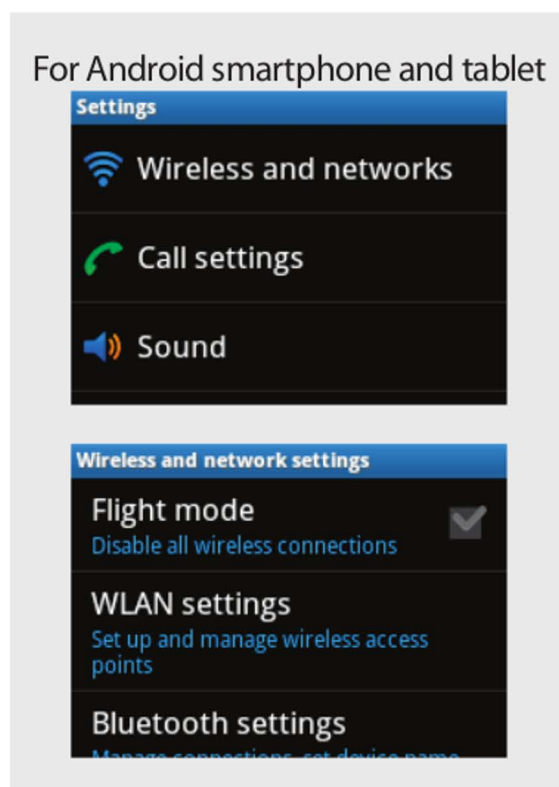

Open WiFi of iPod touch, iPhone, iPad, Android smartphone or tablet.

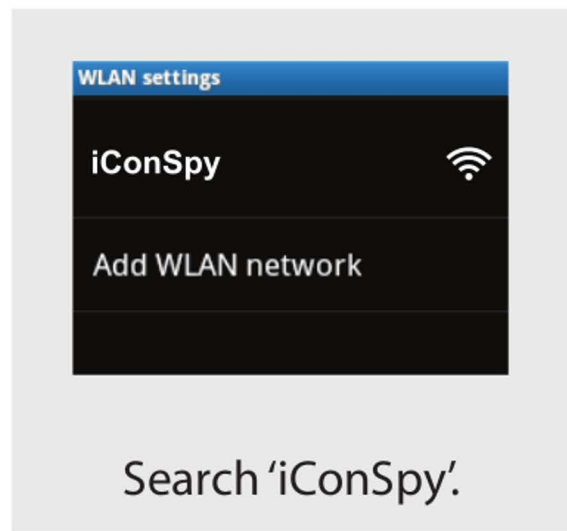

Note: If 'iConSpy' is not found. Please close WiFi and reopen it.

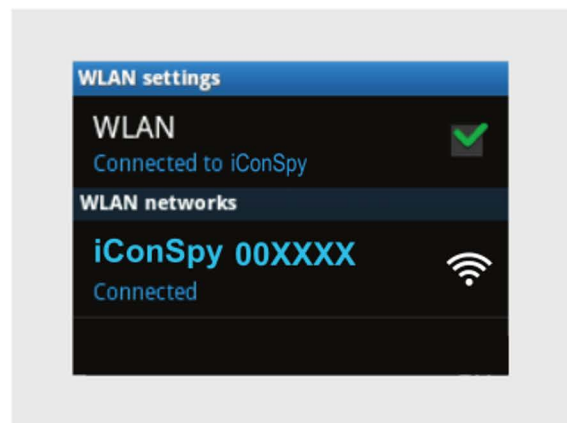

Connect WiFi to the 'iConSpy'. The blue light inside the car should be on in blue continuously. This means the connection succeeded.

3 Setting your iPod touch, iPhone or iPad


When you play this spy car, you should set your iPod touch, iPhone or iPad at first.

Go into setting interface

Turn on "Location Services"




4) Start driving Spy Ghost

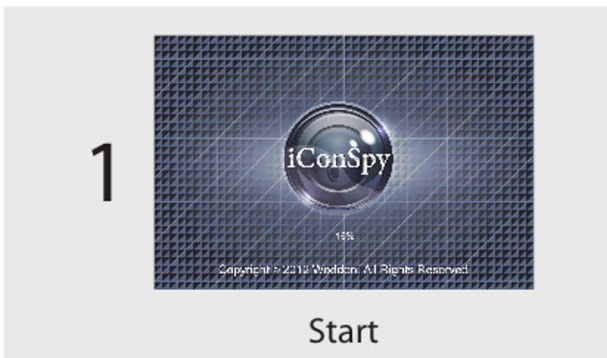


Note: When driving the car, make sure the blue light inside the car is on continuously. If the blue light inside the car starts to flicker twice each time, this means the connection is interrupted. Please close the WiFi and reconnect.

When the operation interface is opened, the default setting is for two-hand operation and touch mode. You might easily learn to master the car by learning the buttons below.

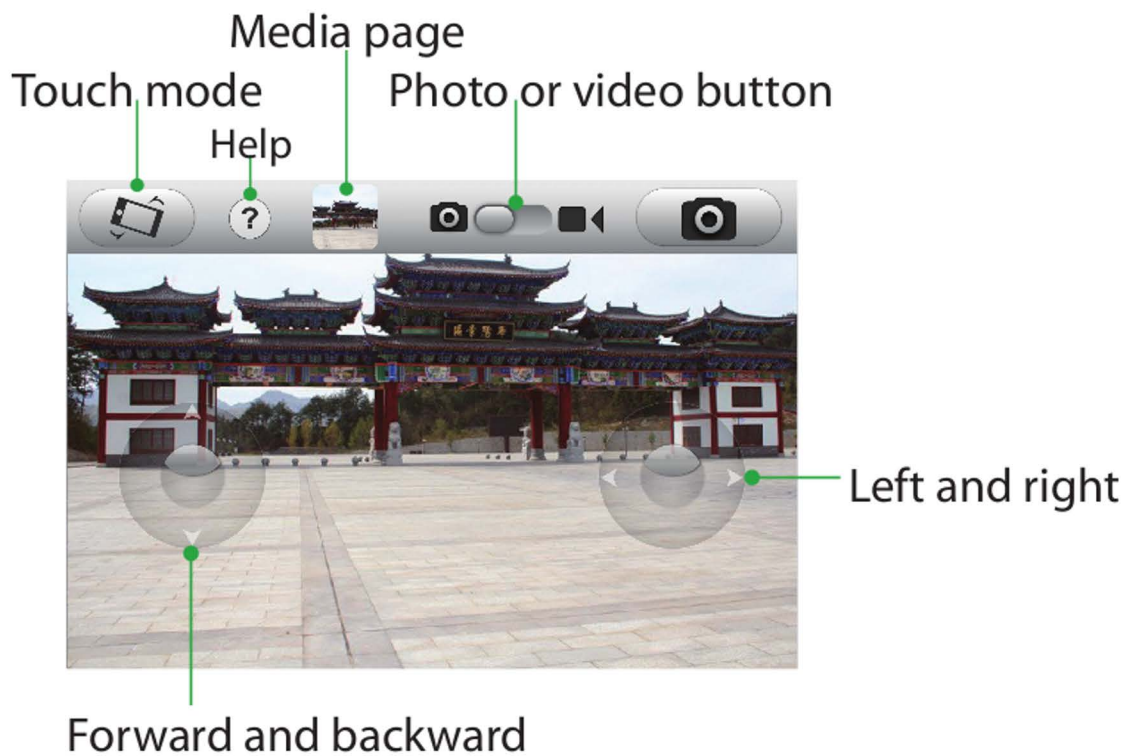




Note:


1. How to take a photo

Once you enter the operation interface, the camera function of the car is activated. From the operation interface, you can see exactly what's seen from the camera. Press  , the car starts to take a photo.

2. How to take a video

Change from photo to video by sliding the  button. Press  , the car starts to take a video. Press  again to stop recording.

3. How to exchange the operation mode

Change from touch mode to motion mode by pressing ,  you can control the car through the motion mode.

4. How to view the photos or videos


Press  the media page, and select the photo or video which you want to view.



Photo: a) Click on the photo, the menu will appear on the picture interface.

Video: b) Click on the video, the video will play.

c) Double-click on the video, the menu will appear on the picture interface.

5. Introduction of picture interface

Return to media page



Return to operation interface

7. Play tips

- 1) You can enjoy a driving time of 10-15 minutes if Spy Ghost is fully charged.
- 2) When driving, do not move the left lever too quickly as this will cause Spy Ghost to drive too fast. To start driving, move the left lever smoothly and continuously up or down.
- 3) The control distance of Ghost is 30-50 meters. You need to keep Spy Ghost within the control area.

8. Troubleshooting

Problem	Possible cause	Solution
Open WiFi of the smartphone, but cannot search 'iConSpy' software.	Power switch of the car is off.	Turn on the car.
	The battery of the car is exhausted.	Recharge the car.
Fail to connect between WiFi and the car.	The car is connected by another device.	Find another device and close the connection. Restart the car and reconnect in another place.
	The battery of the car is exhausted.	Recharge the car.
Cannot open the software interface.	WiFi is not connected.	Connect WiFi.
	Something wrong with iPod touch, iPhone, iPad, Android smartphone or tablet.	Restart the device or change to another device.
Cannot drive the car.	The battery of car is exhausted.	Recharge the car.
The car is driving slowly.	The battery of the car is exhausted.	Recharge the car.
	The car drives out of the control area.	Drive the car within the control area.
The car spins.	Trimming adjustment.	If the car spins left, turn the trimmer to right. If the car spins right, turn the trimmer to left.
Cannot control the car.	Another strong radio wave or controller disturbs your smartphone control.	Drive the car in an environment without interference.
	The car drives out of the control area.	Drive the car within the control area.
	The battery of the car is exhausted.	Recharge the car.

9. Environment

For users who are willing to protect the environment.

The consumer has a significant role to play in reducing the impact of waste electrical and electronic equipment in the environment, through re-using or recycling such equipment.

Some of the components used in electrical and electronic equipment may contain hazardous substances that can damage the environment and present a risk to human health if not properly disposed of.

Battery contains substances that may pollute the environment. Do not throw away empty battery with the normal waste, but dispose of them at an official collection point for the battery. Always remove the battery before you discard and hand in the appliance at an official collection point.


10. Waste Batteries removal

Follow the steps below for safe removal of the Li-Ion battery.


1. Turn off SpyGhost.
2. Unscrew the bottom of SpyGhost.
3. Take off the bonnet of SpyGhost.
4. Cut off the red and black wire one by one, as the two wires should not be cut off at once.




1

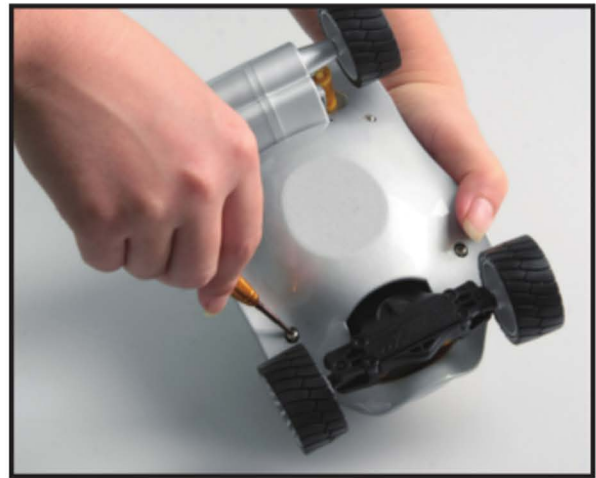

2

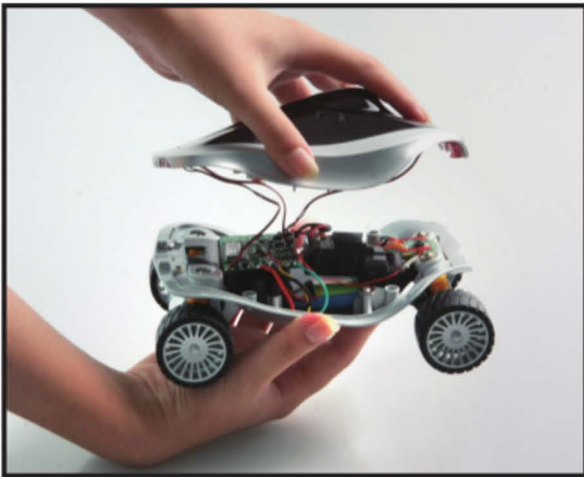

3

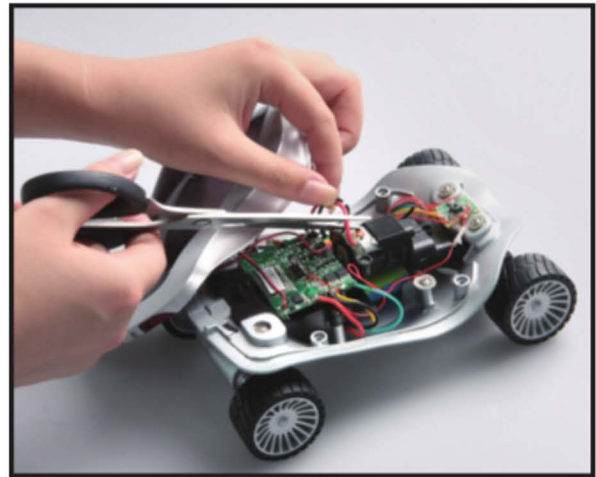

4