

DSR RS 2 Camera Compatibility List							
Brand	Model	Cable	Control Features	Support camera automatic adjustment	Camera Setup Method	Power up the Camera (camera powered on state)	Camera Firmware Version
Sony	A9	[2]Multi-Camera Control Cable (Sony Multi) (in the box) [2]Multi-Camera Control Cable (Micro-USB) (in the box)			When using [1] cable: 1. After connecting the cable, be sure to power on the DSR RS 2 before the camera. Otherwise, the DSR RS 2 will not recognize the camera. If the camera is not recognized, restart the camera or remove and reconnect the cable to the camera. 2. Optical zoom can be controlled through the Remote Focus Wheel (only lenses with built-in power zoom, such as the Sony E PZ 18-105 mm F4 G OSS). If no Power Zoom lens is mounted, the Focus Wheel will control digital zoom. Digital zoom must be enabled in your camera's settings. 3. After connecting with a Sony camera using the [1] cable, if you need to swap to a camera of other manufacturers than a global robot is required. When using [2] cables: 1. Set the camera to MF mode. 2. Select "Network" and then turn off "Cut w/Smartphone". 3. Set the USB Connection to PC remote. 4. The Optical Image Stabilization of the camera will be disabled when using [2] cable, but OIS of the lens will not be affected. 5. When using the focus control electronically, if the lens has AF/MF switch, set it to AF mode, otherwise the electronic focus control function cannot be used. 6. [2] cable and Remote Focus Wheel Transmission System cannot be used at the same time. Note: When using the [2] cable, the camera may not be able to use playback. In this case, put the global in sleep mode.		v4.0
	A6400						v1.00
	A6400				When using [1] cable: 1. After connecting the cable, be sure to power on the DSR RS 2 before the camera. Otherwise, the DSR RS 2 will not recognize the camera. If the camera is not recognized, restart the camera or remove and reconnect the cable to the camera. 2. Optical zoom can be controlled through the Remote Focus Wheel (only lenses with built-in power zoom, such as the Sony E PZ 18-105 mm F4 G OSS). If no Power Zoom lens is mounted, the Focus Wheel will control digital zoom. Digital zoom must be enabled in your camera's settings. 3. After connecting with a Sony camera using the [1] cable, if you need to swap to a camera of other manufacturers than a global robot is required. 4. When taking pictures, you need to select the camera focus mode as manual focus (MF). When using [2] cables: 1. Set the camera to MF mode. 2. Select "Network" and then turn off "Cut w/Smartphone". 3. Set the USB Connection to PC remote. 4. The Optical Image Stabilization of the camera will be disabled when using [2] cable, but OIS of the lens will not be affected. 5. When using the focus control electronically, if the lens has AF/MF switch, set it to AF mode, otherwise the electronic focus control function cannot be used. 6. [2] cable and Remote Focus Wheel Transmission System cannot be used at the same time. Note: When using the [2] cable, the camera may not be able to use playback. In this case, put the global in sleep mode.		v1.00
	A7R IV		When using [1] cable: 1. Capture photos 2. Start/stop recording video 3. Zoom control (digital or optical) 4. Trigger auto focus When using [2] cable: 1. Start/stop recording video 2. Pull focus electronically 3. Trigger auto focus	When using [1] cable: NO When using [2] cable: ISO/Shutter Aperture		When using [1] cable: NO When using [2] cable: YES	v1.10
	A9 II	[2]Multi-Camera Control Cable (Sony Multi) (in the box) [2]Multi-Camera Control Cable (USB-C) (in the box)					v2.00
	A7R III						v3.10
	A7M III						v3.01
	A7S III						-
	A7R III						v4.00
	A7M II						v3.00
	A6500	[2]Multi-Camera Control Cable (Sony Multi) (in the box)	Capture photos Start/stop recording video Zoom control (digital or optical) Trigger auto focus	NO		NO	v1.02
	A6300						v2.01
	A6100						v1.02
Nikon	Z6	[2]Multi-Camera Control Cable (USB-C) (in the box)	Start/stop recording video Capture photos Pull focus electronically Trigger auto focus			Camera powered on state: it will not power the camera. Camera powered off state: using EN-EL18 battery, it will power the camera	v3.0
	Z7						v3.0
	Z50						v1.0
	Z6	[2]Multi-Camera Control Cable (Micro-USB) (in the box)			1. Please connect live view on camera stays on when used with DSR RS 2. 2. To pull focus with DSR RS 2, please push focus mode to A/S, and release the camera focus mode is set to AF. 3. When DSR RS 2 using the [1] cable, it is connected to the Remote Focus Wheel Transmission System at the same time, and you need to press the LV key to confirm the image output. 4. On DSR RS 2, if you want to use the [2] cable and use the Remote Focus Wheel Transmission System at the same time, you need to connect the HDMI cable first, then connect the [2] cable.		v1.30
	Z6						v1.00
Canon	D750		Start/stop recording video Capture photos Pull focus electronically Trigger auto focus				v1.01
	D850						v1.10
	R5			ISO/Shutter Aperture	1. Due to various lens focus control mechanisms, when using the DSR RS 2 to pull focus, you may need to switch the lens between AF and MF to use which best fits your need. 2. When switched to Photo mode, the camera won't respond to video-capturing commands. When switched to video mode, the camera won't respond to photo-capturing commands. 3. Using autofocus with EF lenses will increase the latency of focus. 4. EOS RS RS cannot use this cable to control video recording in the Photo mode, otherwise it will easily crash.		v1.00
	R5	[2]Multi-Camera Control Cable (USB-C) (in the box)	Start/stop recording video Capture photos Pull focus electronically Trigger auto focus				v1.1.0
	R5						v1.2
	R5						v1.1.0
	R5						v1.0.4
	R5					NO	v1.2.3
	R5						v1.1.3
	R5						v1.0.1
	R5						v1.0.2
	R5						v1.2.1
	R5						v1.1.0
	R5						v1.0.2
	R5						v1.0
	R5						v1.0.0
	R5						v1.1.6
	R5						v1.2
	R5						v1.2
	R5						v2.0

Panasonic	S1		Full focus electronically Trigger auto focus			YES	v1.1
	S1H	1)Multi Camera Control Cable (USB-C) (in the box)					v1.3
	S1H						
	S1H		Starting recording video Capture photo Trigger auto focus	NO	/	NO	v1.1
	S1H	2)RSS Control Cable for Panasonic (optional)					v1.1
FUJIFILM	X-H1						v2.01
	X-T2	1)Multi Camera Control Cable (Micro-USB) (in the box) 2)RSS Control Cable for Fujifilm (optional)	When using 1) cable: Capture photo Full focus electronically Trigger auto focus When using 2) cable: Starting recording video Capture photo Trigger auto focus	When using 1) cable, ISO/Shutter/Aperture When using 2) cable, NO	When using 1) cable: 1. Set PC connection mode to "USB Auto Mode". 2. The camera button functions are not supported during the connection. To use the camera button functions, make sure the ghibli is in sleep mode. 3. After using the 1) line to trigger auto focus, the auto focus icon will always exist on the screen. 4. In the case of using the 2) cable, the video mode and photo mode cannot be switched in the power-on state, and the camera needs to be restarted to use the switched mode. 5. When X-T2S-X-T4 is in recording mode, the ghibli cannot set camera parameters. Note: a few parameters of some lenses may not be set.	When using 1) cable, YES When using 2) cable, NO	v1.3
	X-T3	1)Multi Camera Control Cable (USB-C) (in the box) 2)RSS Control Cable for Fujifilm (optional)	When using 1) cable: Starting recording video Capture photo Full focus electronically Trigger auto focus When using 2) cable: Starting recording video Capture photo Trigger auto focus				v1.10
	X-T4						v1.0
	X-T30						v1.0
	X-T30	1)RSS Control Cable for Fujifilm (optional)	Starting recording video Capture photo Trigger auto focus	NO	Requires camera settings: MOVIE SETTINGS-ARC/REMOTE RELEASE-REMOTE		v1.00
	X-E3						v1.22
Blackmagicdesign	BMPC 4K		Starting recording video Capture photo Full focus electronically Trigger auto focus			NO	v1.6
	BMPC 4K	1)Multi Camera Control Cable (USB-C) (in the box)	Starting recording video Capture photo Trigger auto focus		/		v1.6
Signa	FP	1)Multi Camera Control Cable (USB-C) (in the box)	Starting recording video Capture photo Full focus electronically Trigger auto focus	ISO/Shutter/Aperture	1. When 1) cable is connected, the camera button function cannot be used, it can be used only after the ghibli is in sleep mode or the 1) cable is pulled. 2. To connect the 1) cable, you need to set the USB mode to "Camera Control" in the system menu. 3. When pulling focus electronically, you need to set the constant auto focus to "off" in the focus menu. 4. In the video mode, if ghibli controls the camera to take pictures, the ghibli cannot control the camera. You need to restart the camera to make the ghibli control the camera again. Note: currently only the first dial is supported to set camera parameters, the APD does not currently support it.	NO	v2.00
Olympus	E-M1 II	1)Multi Camera Control Cable (USB-C) (in the box)	Starting recording video Capture photo Full focus electronically Trigger auto focus	ISO/Shutter	1. To connect the 1) cable, select the "computer + camera" icon displayed on the camera screen. 2. To connect the 1) cable, during the recording process, the camera cannot be controlled to trigger auto focus.	NO	v1.1
Z CAM	Z CAM E2	Z CAM will officially launch a dedicated control cable 1)E2H BSC 2 / RS 2 to Z CAM E2 control cable 2)E2H BSC 2 / RS 2 to Z CAM E2 Plugplay Series control cable	Starting recording video	ISO/Aperture	/	NO	/