


Tips: Calibration

1




Hold down the power button on Ozobot for 2 seconds until the LED light turns white.

2

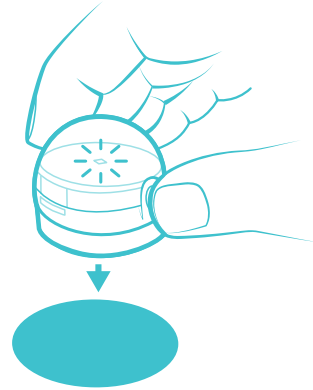


Quickly Place Ozobot in the middle of the black calibration dot.

3

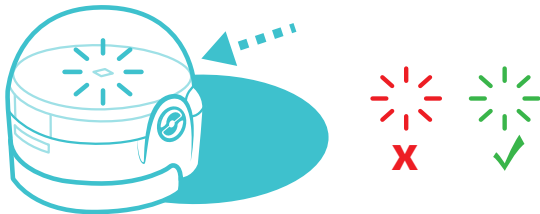

Ozobot will move forward and blink green, which means it has successfully calibrated. Start over if Ozobot blinks red.

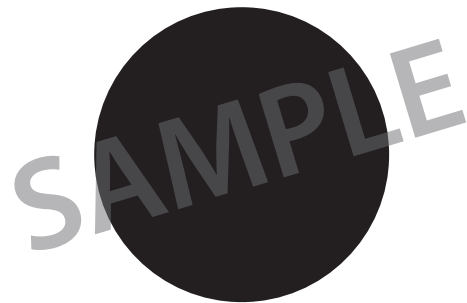

Use a black dot of this size to calibrate. If you are using markers, create a similar sized calibration dot using the black marker.

Tips: Drawing Lines



X

Too Thin!



X

Too Thick!



X

Inconsistent!




✓

Just Right



X

Too Close!

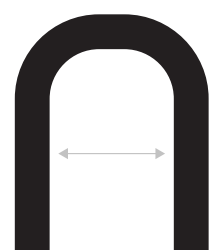

✓

Just Right



X

Too Sharp!



✓

Just Right



✓

Just Right

Tips: Drawing Codes



X
Codes on
colored lines



X
Different
sizes



X
White
spaces



X
Overlapping
colors




X
Too dark




✓
Codes on
black lines


Tips: General

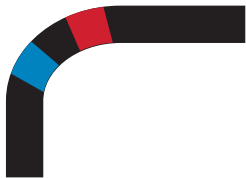


X
No codes on
corners!

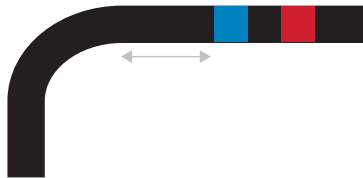

✓
Keep codes on straight
lines away from corners

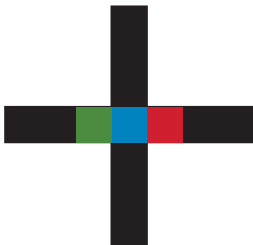

X
Too close!

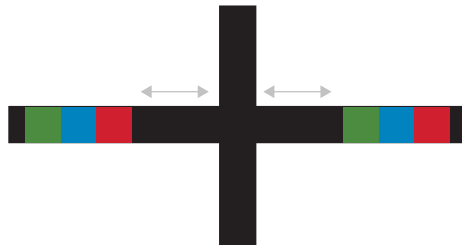

✓
Place codes away
from intersections




✓
All other codes need
black line before and after



✓
2 color codes need
to be at line end

Tips: OzoDraw

Before playing on a tablet or smartphone, you need to calibrate to the digital screen. Follow the calibration instructions in the "Ozobot Tuneup" section of our apps.

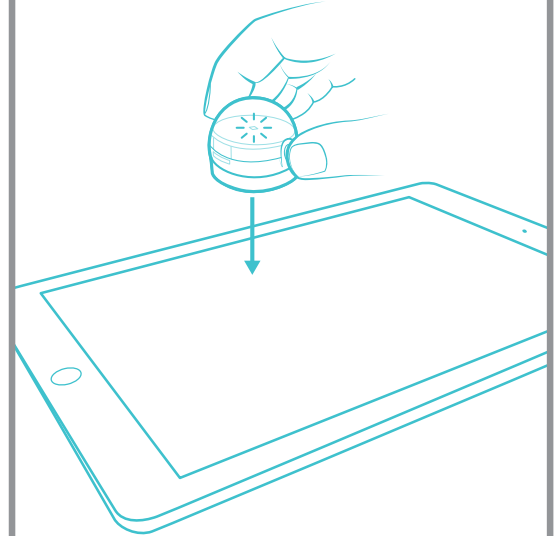

Flash Codes


Tap to
toggle!



Static Codes



Two-finger
touch to
rotate

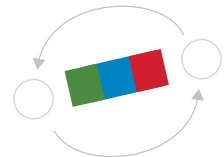

✓
Flash Codes
will work on
colored lines



X
Not aligned
to path



To delete code,
tap and drag
code off screen

