

PLEO rb firmware update instructions using MicroSD card

Rev.02 26 Sept 2011

Warning: DO NOT download Pleo rb PM firmware to any Ugobe Pleo or Innvo Labs 2009 Pleo!
DO NOT remove the battery pack or switch off the power during the update.

- I Select and download the desired PM firmware which is in zipped form.
- I Unzip the file and copy all unzipped files to a **blank** MicroSD card.
- I Remove the battery from PLEO rb and insert MicroSD card to the card reader which is located inside the battery compartment. Please read the companion guide for details.
- I Insert a **fully charged** battery to PLEO rb.
- I Switch on PLEO rb by press & release the on/off button. The power indicator light should turn green.
- I Wait about **2 minutes for the PM firmware to upload. DO NOT** interrupt the upload process and **DO NOT** remove the battery pack or switch off the power!
- I PLEO rb will issue a sound prompt when the PM upload is complete.
- I Remove the battery from PLEO rb and then remove the MicroSD card from the reader.
- I Re-insert the battery and then restart PLEO rb as usual.

End