 


TOCKY
touch

This is a guide for Tocky touch®, the alarm clock that rolls away and hides to get you out of bed. To reduce the risk of injury, prevent loss of warranty, and/or damage to this product, follow these instructions as you welcome Tocky Touch into your home.

2010 © Nanda Home Inc. All Rights Reserved. This product is produced from original artwork. All copyright and trademark rights in the distinctive appearance and function of this article are owned by Nanda Home Inc. Tocky Touch® is a trademark of Nanda Home Inc. Distributed by Nanda Home Inc. Designed in the US. Printed in China. Patent Pending. nandahome.com.

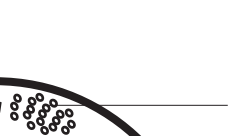

- Speaker & microphone
- Silicone jacket
- Spinner dial (touch sensitive)
- Alarm time (am position)
- Current time
- Alarm time (pm position)
- On/Off & Record button
- Toggle button
- USB port
- Leg

600

7:58

600

600

600

600

600

600

600



- Press once to turn on my backlight. Press again to browse my settings. Hold for 2 seconds to go home or turn alarm off (when sounding).

1045

1045

1045

1045

 
1045

1045

1045

1045

1045

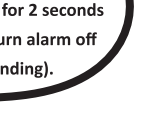

- Spin dial to change the display

1045

1045

1045

1045

 
1045

1045

1045

1045

1045

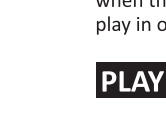

- My digits change as fast as you can spin around my touch dial

1045

1045

1045

1045

 
1045

1045

1045

1045

1045

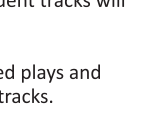

- In my alarm setting screen, press the on/off button for 1 second to change my alarm state. When my alarm sounds, I will beep and roll away. Press and hold toggle to turn my alarm off.

1045

1045

1045

1045

1045

1045

1045

1045

1045



- Press toggle to turn Tocky on, access settings, or go home

1045

1045

1045

1045

 
1045

1045

1045

1045

1045

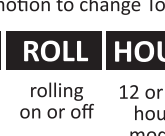

- Press once to turn on my backlight. Press again to browse my settings. Hold for 2 seconds to go home or turn alarm off (when sounding).

1045

1045

1045

1045

1045

1045

1045

1045

1045



- Spin dial to change the display

1045

1045

1045

1045

 
1045

1045

1045

1045

1045

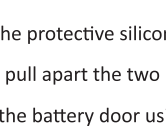

- My digits change as fast as you can spin around my touch dial

1045

1045

1045

1045

1045

1045

1045

1045

1045



- In my alarm setting screen, press the on/off button for 1 second to change my alarm state. When my alarm sounds, I will beep and roll away. Press and hold toggle to turn my alarm off.

1045

1045

1045

1045

 
1045

1045

1045

1045

1045

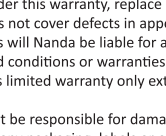

- Press once to turn on my backlight. Press again to browse my settings. Hold for 2 seconds to go home or turn alarm off (when sounding).

1045

1045

1045

1045

 
1045

1045

1045

1045

1045

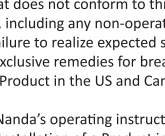

- Spin dial to change the display

1045

1045

1045

1045

 
1045

1045

1045

1045

1045

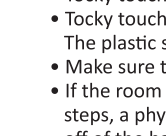

- My digits change as fast as you can spin around my touch dial

1045

1045

1045

1045

 
1045

1045

1045

1045

1045

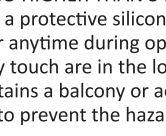

- In my alarm setting screen, press the on/off button for 1 second to change my alarm state. When my alarm sounds, I will beep and roll away. Press and hold toggle to turn my alarm off.

1045

1045

1045

1045

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
1045

1045

1045

1045






















1045

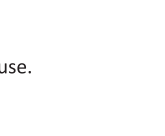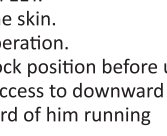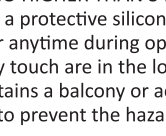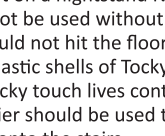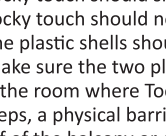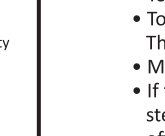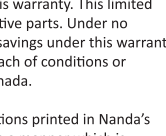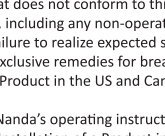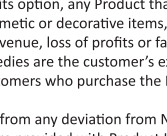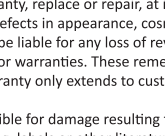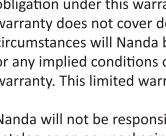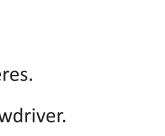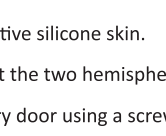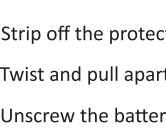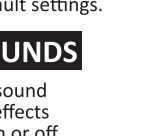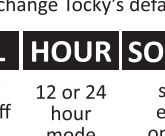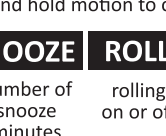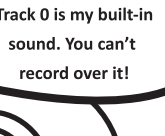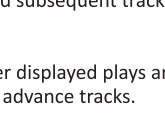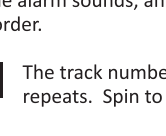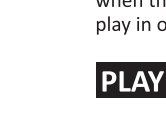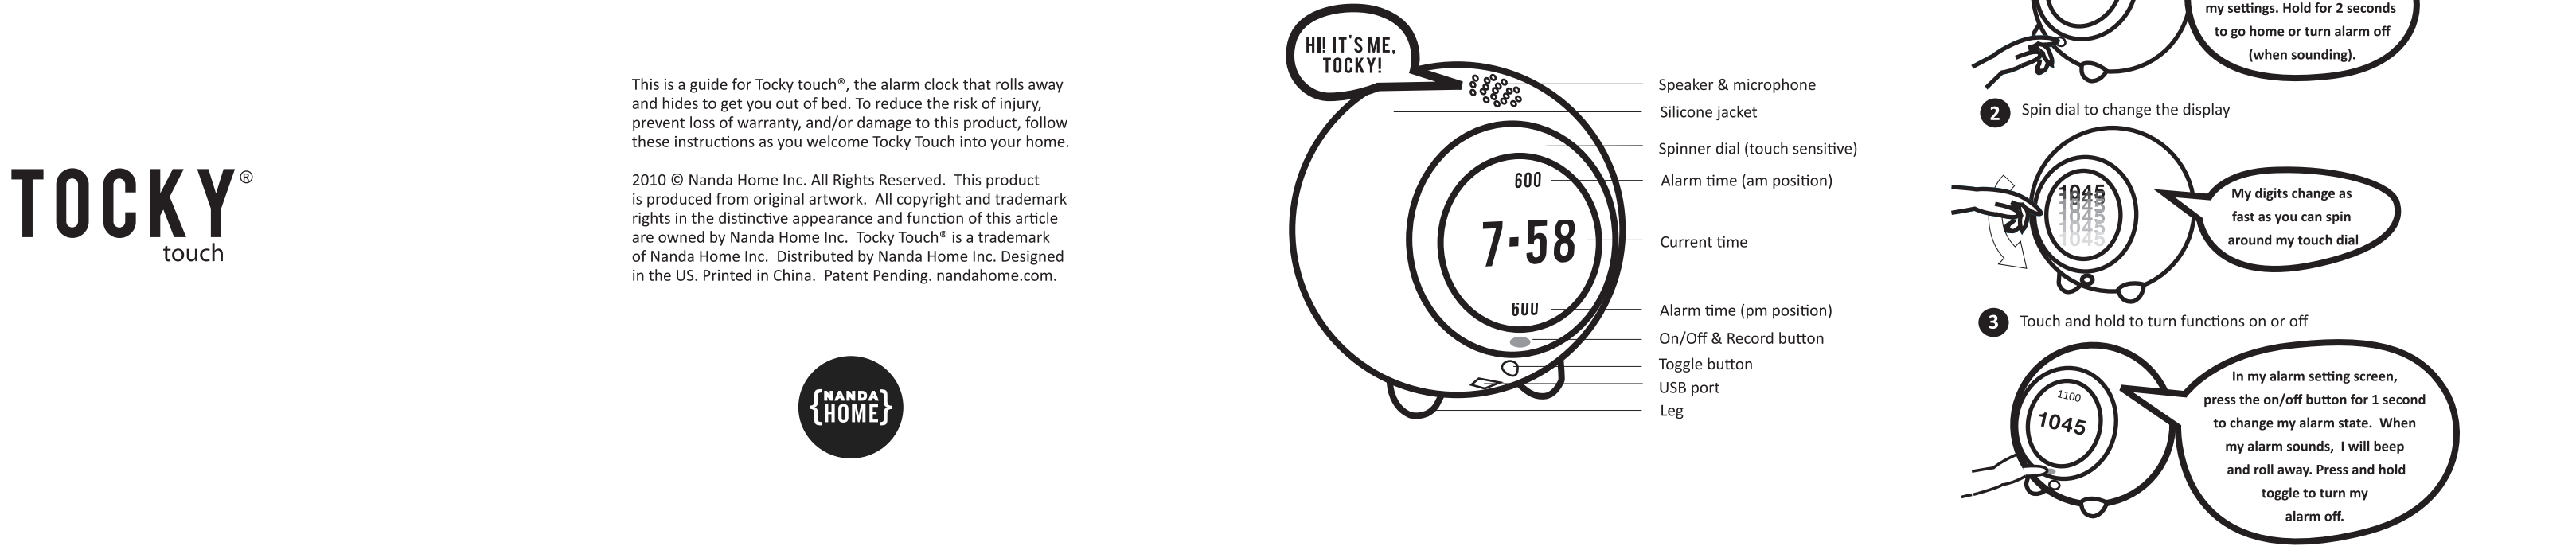

TOCKY
touch



 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
2010 © Nanda Home Inc. All Rights Reserved. This product is produced from original artwork. All copyright and trademark rights in the distinctive appearance and function of this article are owned by Nanda Home Inc. Tocky Touch® is a trademark of Nanda Home Inc. Distributed by Nanda Home Inc. Designed in the US. Printed in China. Patent Pending. nandahome.com.

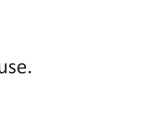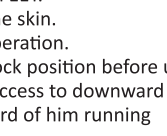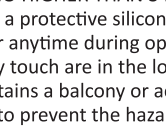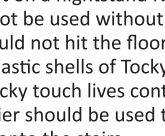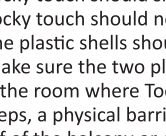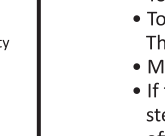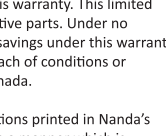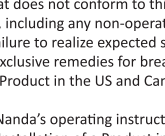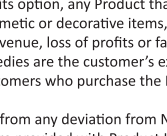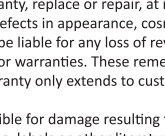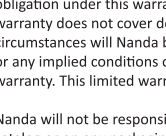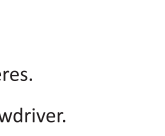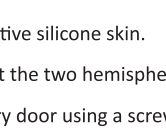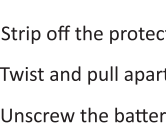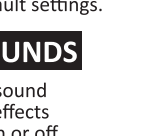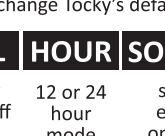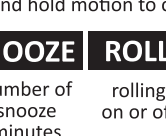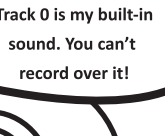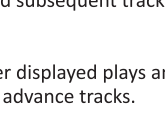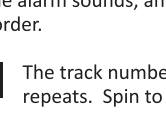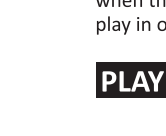

TOCKY
touch



 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
2010 © Nanda Home Inc. All Rights Reserved. This product is produced from original artwork. All copyright and trademark rights in the distinctive appearance and function of this article are owned by Nanda Home Inc. Tocky Touch® is a trademark of Nanda Home Inc. Distributed by Nanda Home Inc. Designed in the US. Printed in China. Patent Pending. nandahome.com.

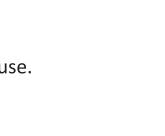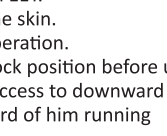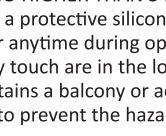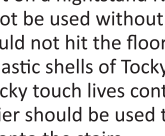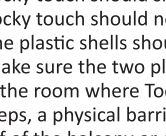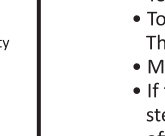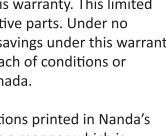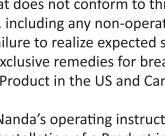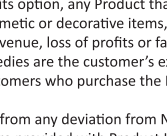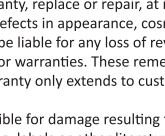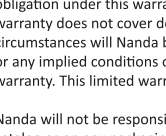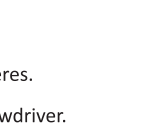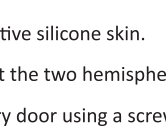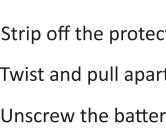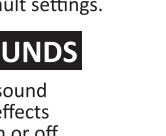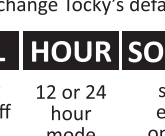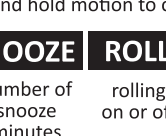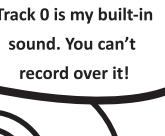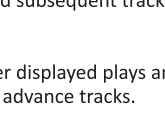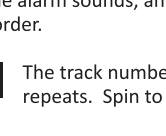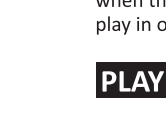

TOCKY
touch



                     2010 © Nanda Home Inc. All Rights Reserved. This product is produced from original artwork. All copyright and trademark rights in the distinctive appearance and function of this article are owned by Nanda Home Inc. Tocky Touch® is a trademark of Nanda Home Inc. Distributed by Nanda Home Inc. Designed in the US. Printed in China. Patent Pending. nandahome.com.

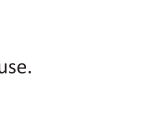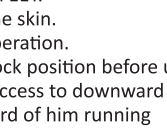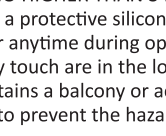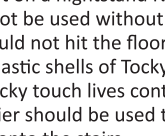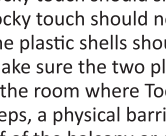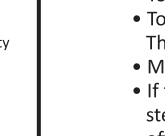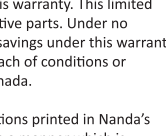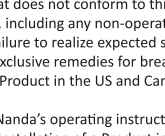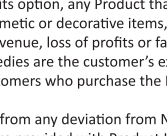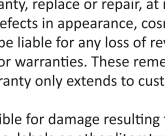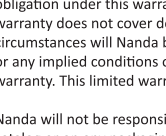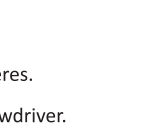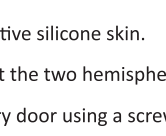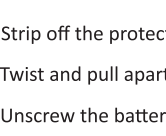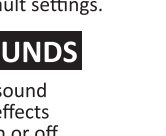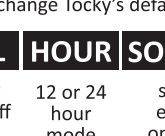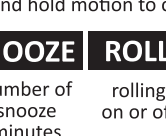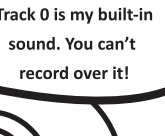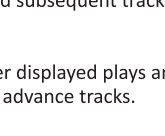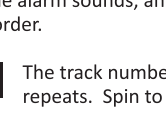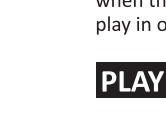

TOCKY
touch



2010 © Nanda Home Inc. All Rights Reserved. This product is produced from original artwork. All copyright and trademark rights in the distinctive appearance and function of this article are owned by Nanda Home Inc. Tocky Touch® is a trademark of Nanda Home Inc. Distributed by Nanda Home Inc. Designed in the US. Printed in China. Patent Pending. nandahome.com.

